

800

SPRING REWIND REELS

To handle 3/4" or 1" I.D. hose.

- Rollformed channel frame for heavy-duty applications.
- Non sparking ratchet assembly.
- Declutching arbor to prevent damage from reverse winding.
- Standard inlet 90° balanced pressure swivel joint 1" female NPT threads.
- Standard outlet 1" female NPT threads.
- Pressures to 2000 psi (138 bar).
- Temperatures from -40° F to +250° F (-40° C to +121° C).
- Consult factory for other pressures & temps.
- 4-way roller assembly.
- · Constant Tension is available consult factory.

For:

• Fuel Dispensing (Consult Factory)

- Waste Oil Evacuation
- Air/Water

Parts Drawing - ISO 42

Model Number					Approx. Weight		Reel Dimensions*** in. mm									
	I.D. (in)	3/4"	1"													
	I.D. (mm)	19	25													
	O.D. (in) 0.D. (mm)	1-9/32" 33	1-9/16" 40	NET	SHIP		Α	В	C	D	E	F	G	Н	Х	Υ
818-23-24-10.5J		50 15	25 8	87 39	122 55	R206	11.25 286	6 152	10.5 267	23.25 591	24.38 619	15.5 394	23.88 607	12.5 318	6.5 165	20 508
816-25-26-10.5B		60 18	35 11	96 44	131 59	R204	9.25 235	4 102	10.5 267	25 635	26.12 663	13.5 343	25.88 657	13.5 343	4.5 114	21.75 552
818-25-26-10.5B		70 21	50 15	102 46	137 62	R206	11.25 286	6 152	10.5 267	25 635	26.12 663	15.5 394	25.88 657	13.5 343	6.5 165	21.75 552
820-25-26-10.5A		85 26	75 23	131 59	166 75	R308	13.25 337	8 203	10.5 267	25 635	27 686	18.25 464	25.88 657	13.5 343	8.5 216	21.75 552
820-30-31-10.5A		- -	100 30	137 62	172 78	R308	13.25 337	8 203	10.5 267	28.5 724	30.5 775	18.25 464	31.38 797	17 432	8.5 216	25.25 641
820-30-31-15.5A		100 30	- -	145 66	180 82	R308	13.25 337	8 203	15.5 394	28.5 724	30.5 775	18.25 464	31.38 797	17 432	8.5 216	25.25 641

Notes: A hose stop is necessary on hose to keep spring from unwinding.

- 1. Specifications subject to change.
- Reels models and capacities shown are for standard drag applications; for vertical lift applications consult factory.
- 3. Other sizes, from standard components, available on request.
- 4. Finish: refer to Page 4.
- 5. Be sure to check dimensions and weights prior to ordering.

NOTICE: <u>A Flexible Connector</u> must be used between the inlet pipe and the inlet swivel joint.

*** x,y indicate mounting holes. See page 2



